


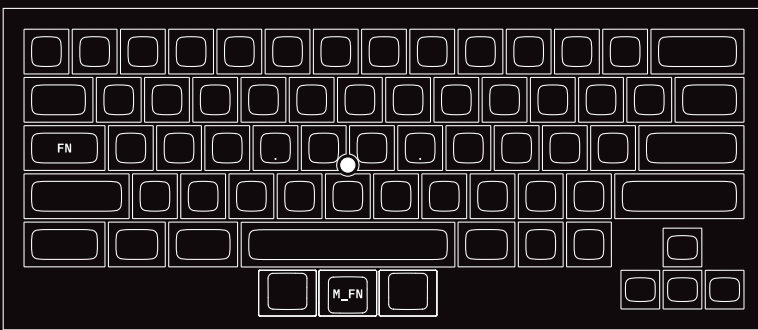

Feature

- N-Key rollover
- Cherry MX1A Type switch
- Programmable
- Trackpoint
- Fn key function support
- USB Type-C interface
- Support US/EU/JP & DIY Layout

Function Description

- | | |
|----------------------------|----------------------------|
| • FN + F = ~ (Shift + `) | • FN + W = Volume decrease |
| • Fn + [1 - =] = F1 - F12 | • FN + E = Volume increase |
| • FN + Tab = CapsLock | • FN + ↑ = Page Up |
| • FN + Backspace = Delete | • FN + ↓ = Page Down |
| • FN + U = PrtSc | • FN + ← = Home |
| • FN + I = Insert | • FN + → = End |
| • FN + Q = Mute | |

Dip Switch Function Description

- All port disable = default setting
- Port 1 - 3 enable = Profile 1 - 3 (Can't be used simultaneous)
- Port 4 enable = Mouse middle key with dual function
 - M_Fn + Trackpoint = scrolling function
 - M_Fn (Click) = Mouse middle key click function
- Port 5 enable = Reverse Trackpoint Scrolling vertical direction
- Port 6 enable = Enable file system (Need re-plug keyboard)

M_Fn key description

- M_Fn + [1 - 9] = Trackpoint sensitivity 1 - 9
- M_Fn + Trackpoint = Scrolling function
- M_Fn + ,(<) = Fn & Ctrl_left swap position (only in default profile)
- M_Fn + .(>) = Alt & Win swap position (only in default profile)
- M_Fn + /(?) = ESC change to ` (~) (only in default profile)